

Duo-Fine[®] P Series Filter Cartridges

High Surface Area Pleated Cartridges With Polyester Hardware

- High surface area pleated cartridges combine excellent retention characteristics with high contaminant-holding capacity
- Polyester hardware provides excellent compatibility
- Available in retention ratings of 0.2 to 50 μm
- Thermal bonding eliminates epoxy potting, adhesives and glues
- Manufactured under ISO 9001 quality system

Performance Specifications

Filter grades 0.2, 0.45, 1, 3, 10, 30, 50 µm

Recommended change-out differential pressure¹ 2.4 bard (35 psid)

Maximum differential pressure

5.2 bard (75 psid) @ 20°C (68°F) 2.8 bard (40 psid) @ 93°C (200°F)

Maximum operating temperature² 93°C (200°F)

Product Specifications

Materials of construction

Filter media:	
50 µm:	Spunbonded polyester
All other grades:	Borosilicate microfiberglass with
	acrylic binder
Support material:	Polyester
Hardware:	Polyester
Sealing:	Thermal bond
Gaskets/O-rings:	Fluorocarbon elastomer, nitrile,
	hydrocarbon rubber, silicone
	elastomer, FEP encapsulated
	silicone



Dimensions (nominal)

Outside Diameter:	6.4 cm (2.5 in)
Lengths (tip-to-tip):	25.4 cm (10 in), 50.8 cm (20 in),
	76.2 cm (30 in), 78.5 cm (30.9 in),
	101.6 cm (40 in)

¹ Provided that the maximum differential pressure is not exceeded based on temperature limits defined above.

² With compatible fluids.

Particle Retention (µm)


Liquid Service (by A		STM F-795 Test)	Gas Service
Cartridge Designation	90% Efficiency	>99.9% Efficiency	Removal Efficiency by DOP Test
DFPT 0.2	0.2	1.0	99.999%
DFPT 0.45	0.45	2.0	99.998%
DFPT 1	1.0	4.0	96%
DFPT 3	3.0	10.0	
DFPT 10	10.0	18.0	
DFPT 30	30.0	45.0	
DFPT 50	50.0	65.0	

Duo-Fine P Series filter cartridges have been extensively laboratory and field tested to determine removal efficiencies in the most stringent of operating conditions.

The removal rating of any filtration device will depend on, to some extent, the conditions under which it is used or tested. The test results will be influenced by the nature of the fluid, its viscosity, the flow rate, the type of contaminant, and the temperature.

The ratings given above represent the diameter of the largest hard spherical particle that will pass through the filter during standard test. Consult Pall for a complete description of Pall's test procedures.

Typical Flow vs. Differential Pressure for Application Sizing

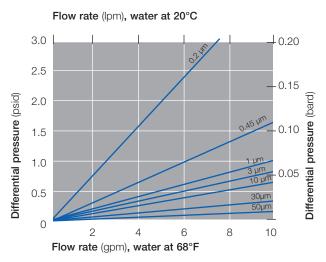

Unit conversion: 1 bar = 100 kPa

Flow rate is for a 25.4 cm (10 in) cartridge. For liquids other than water, multiply differential pressure by fluid viscosity (cP).

Ordering Information

2 E 3 – 4 Pall Part Number = DFPT 1 _

Table 1		
Code	Filter grades (µm)	
0.2	0.2	
0.45	0.45	
1	1	
3	3	
10	10	
30	30	
50	50	

To	Ы		2
Ia		e	0

Code	Gasket/O-ring materials
S	Silicone
Ν	Nitrile
E	Hydrocarbon rubber
V	Fluorocarbon elastomer
Т	FEP encapsulated silicone (O-rings)

Table 2

Table 4

Code	Cartridge lengths (cm/in) nominal	
10	25.4/10	
20	50.8/20	
30	76.2/30	
30.9	78.5/30.9	
40	101.6/40	

³ For details, contact Pall Corporation.

Code	End configurations
DOE	DOE with elastomer gasket seals & end caps
M3	SOE flat closed end, external 222 O-rings (retrofits other manufacturers' Code 0) ³
M8	SOE fin end, external 222 O-rings (retrofits other manufacturers' Code 5) ³



Fuels and Chemicals

25 Harbor Park Drive			
Port Washington, NY	11050		
+1 516 484 3600	telephone		
+1 888 873 7255	toll free US		

Visit us on the Web at www.pall.com

Pall Corporation has offices and plants throughout the world. For Pall representatives in your area, please go to www.pall.com/contact.

Because of technological developments related to the products, systems, and/or services described herein, the data and procedures are subject to change without notice. Please consult your Pall representative or visit www.pall.com to verify that this information remains valid.

© Copyright 2005, 2016, Pall Corporation. Pall, (PALL) , and Duo-Fine are trademarks of Pall Corporation. ® Indicates a Pall trademark registered in the USA. Filtration. Separation. Solution.sw is a service mark of Pall Corporation.

FCDUOFPENa