

The Pall PCC61-KC Cleanliness Cabinet facilitates the accurate, reliable and repeatable preparation of gravimetric membranes for the determination of component cleanliness.

The PCC61-KC cabinet enables operators to access the cleanliness level of manufactured parts and components in accordance with ISO18413, ISO16232 and VDA 19 procedures.

Features

- Large work area for large manufactured parts
- Reliable and repeatable measurements
- HEPA filtered laminar air flow in a self contained super polished stainless steel working area
- Simple to install and operate
- Fully portable requiring only a power source
- Designed and built to ISO Pressure Washing standard 16232
- · Solvent dispensing gun with fluid volume dispensing counter
- Pressurized solvent dispensing and recycling circuits
- Gravimetric membrane holder
- Auto Wall Wash function
- PLC controlled operating parameters (option)

General Specifications

- Dimensions: 1660mm (W) x 1050mm (D) x 2310 (2330mm with a projected blower port) (H)
- Inputs: 220 or 380 or 415 V AC
 50 or 60Hz, 1 or 3 phase
- Working area: 1460mm (W) x 800mm (D) X 770mm (660mm at the entrance) (H)
- Fluorocarbon seals, BA grade SUS304 materials are standard
- Air flow ISO14644-123 Class 5
- Polished stainless steel extraction enclosure
- Controlled cleanliness environment (Class 5 per ISO 14644-1)
- HEPA filter rating: 0.3m absolute
- Control panel with colored touch screen
- Maximum flash point of wash fluid >55°C
- Test membrane holder in the power zone
- Noise level in working conditions: < 80dB



Filtration. Separation. Solution.sm

NEW: Pall PCC61-KC Component Cleanliness Cabinet

For the determination of component cleanliness



Pall PCC61-KC, Pall Cleanliness Cabinet



Component cleanliness measurement in a controlled stainless steel environment

Cabinet Option

Touch Screen PLC 5" (Optional Human Machine Interface)



Technical Specification Information

- Power Inputs: 220V 50 or 60Hz, 1 or 3 Phase
- Electric Power Consumption: 1.5KW (~6A)
- Reservoir (solvent): 50L (with fluid level Indicator)
- Spray Rinsing flow rate: Set 2.5L/min adjustable,
- Total Spray Volume: pre-configurable (1L, 2L,etc)
- Wall Wash flow rate: ~12L/min (adjustable)
- Spray Rinse pressure: Set 5bar (adjustable, max.7bar)
- Wall Wash Solvent filter rating 0.2 m +1 m; (2 stages Absolute)
- Dry weight: 800kg
- Inlet Fan Blower Flow Rate: ~1500mm³/Hr
- Air flow Speed Controllable by Dimmer Switch
- Outlet Fan Blow Flow Rate: ~2200mm³/Hr
- Air flow Speed Controllable by Dimmer Switch
- Membrane Holder: 2 Stages Cascade, 47mm Dia. 3 Stages Cascade (option)
- Chemical Compatibility: synthetic hydrocarbon fluids
- Vacuum pump: -0.65~-0.85bar vacuum pressure

Ordering Information

Component Cleanliness Cabinet

PCC61-KC







Table 1: Option

Code	Description
Omit	Standard
T5	Touch Screen PLC-5" size
T7	Touch Screen PLC-7" size
T8	Touch Screen PLC, 8"size display

Table 3: Option

Code	Description
R	220V AC 60Hz 1Phase
W	220V AC 50Hz 1Phase
Χ	220V AC 50Hz 3Phase
Υ	380V AC 50Hz 3Phase
Z	415V AC 50Hz 3Phase
V	200V AC 50Hz 3Phase

Technical Drawing

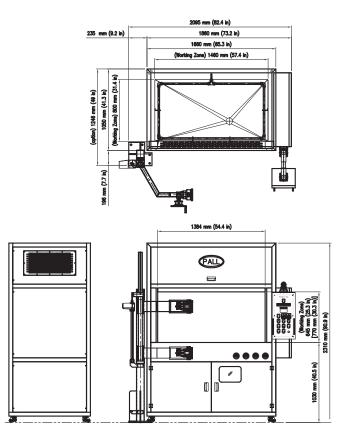


Table 2: Option

Code	Description
S	Shower Nozzle Line
Р	Oil & Air purge and Nozzle Line Addition

Table 4: Option

Code	Description
Omit	PCC alone without Lift Arm
65LT	Auto Lift Arm 65kgf
100LT	Auto Lift Arm 100kgf
150LT	Auto Lift Arm 150kgf



Pall Corporation

Pall Machinery and Equipment

25 Harbor Park Drive Port Washington, NY 11050 +1 516 484 3600 telephone +1 800 289 7255 toll free US

Pall Korea Limited

968-5, 4F, Ildong Building, Daechi-Dong Gangnam-Gu, Seoul, Korea +82 2 560 7826, +82 2 560 8791 +82 2 569 9092



© Copyright 2014, Pall Corporation. Pall, PALL , are trademarks of Pall Corporation. ® Indicates a Pall trademark registered in the USA. Filtration. Separation. Solution.sm is a service mark of Pall Corporation.

Pall Corporation has offices and plants throughout the world. For Pall representatives in your

Because of technological developments related to the products, systems, and/or services described herein, the data and procedures are subject to change without notice. Please consult your Pall representative or visit www.pall.com to verify that this information remains valid.

Visit us on the Web at www.pall.com



