

The UltiFuzor degas module is a hollow fiber membrane contactor designed for efficient removal of dissolved gases from ink jet inks on-board ink jet printing systems.

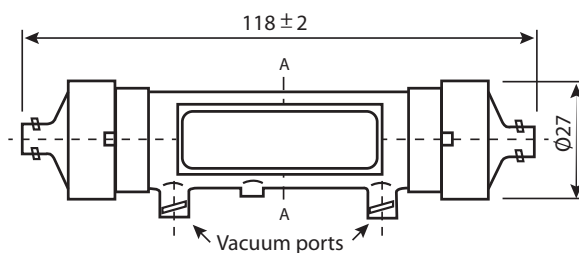


Figure 1: Dimensions in mm



## 1.0 Specifications

<b>Part Number</b>	UDM-21110
<b>Materials</b>	
Hollow fiber	Polyethylene
Housing	Polypropylene (black)
Potting resin	Epoxy
<b>Connections</b>	Female luer lock
<b>Weight (dry)</b>	21 + 2 g
<b>Maximum Operating Pressure<sup>1</sup></b>	0.2 MPa @ 45 °C / 30 PSI @ 113 °F
<b>Maximum Operating Temperature<sup>1</sup></b>	45 °C / 113 °F
<b>Maximum Allowable Vacuum Pressure</b>	1 kPa absolute / 7.5 torr (warning: see vacuum operating guidelines, Section 3.6)
<b>Flow Range</b>	1 – 100 mL/min

<sup>1</sup> In compatible liquids which do not soften swell or adversely affect the materials of construction

## 2.0 Liquid Flow Path

The ink flows on the inside of the hollow fiber while vacuum is applied to the outside of the fiber. Linear flow path allows for continuous degassing along length of fiber.

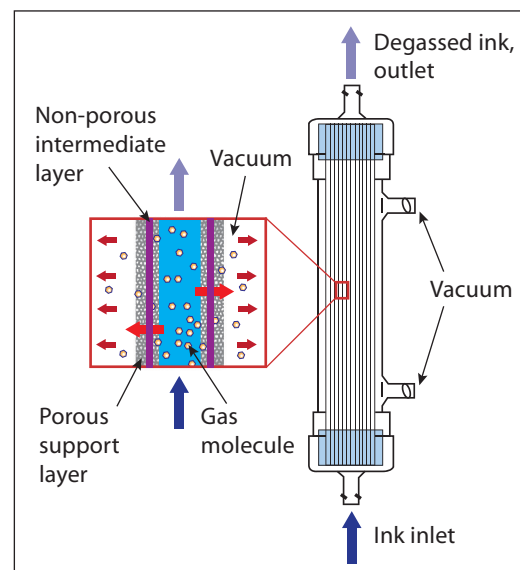


Figure 2: Schematic of fiber showing directional flow

### 3.0 Installation and Start-up General Guidelines

- 3.1 UltiFuzor degas modules can be installed in any orientation; vertical orientation is preferred for best performance. If placed horizontally, position the vacuum ports to face downward to facilitate draining of any potential condensable vapor.
- 3.2 Connect ink inlet/outlet and vacuum ports. (See figure 2.) Verify that connection surfaces are clean and not damaged. Make sure not to over tighten the luer lock fittings.
- 3.3 The module can be operated with only one vacuum port, by capping off the other port. Depending on the type of ink and/or extent of degassing required, using both ports may provide more efficient gas removal.
- 3.4 In order to avoid drawing any condensable vapor or liquid ink (in the case of damage to the UltiFuzor module) into the vacuum source, a trap may be placed between the vacuum port of the module and the vacuum pump (figure 3). This device should utilize standard trap construction with a vacuum tight vessel that can collect liquids and be drained periodically, if required. If safety is a concern, this trap may be maintained at a low temperature to condense any solvent that might evaporate from the ink, due to the applied vacuum.

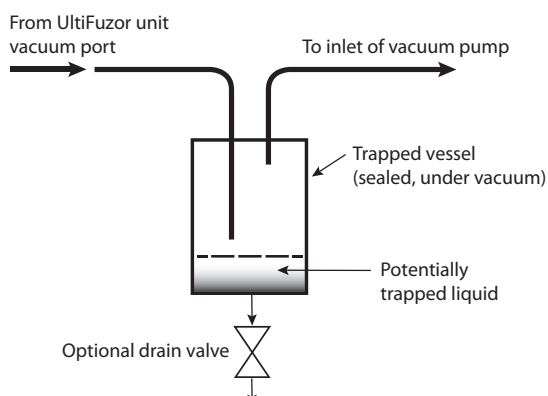


Figure 3: Schematic of a liquid trap set-up

- 3.5 Start the vacuum pump per the manufacturer's instructions. Gradually apply vacuum to the degas module.

- 3.6 **Make sure that the absolute vacuum pressure is not lower than the vapor pressure of the most volatile component in the ink.** The lower the absolute pressure on the vacuum side of the module (that is, the deeper the vacuum), the greater is the likelihood that the ink carrier liquid may evaporate into the vacuum. This can happen if the absolute pressure on the vacuum side approaches the vapor pressure of the carrier liquid (or other components present) at the operating temperature. It is generally recommended that if the vapor pressures of ink components are unknown, that the operator starts by employing a somewhat higher absolute pressure, for example, 13.4 kPa absolute (100 torr). Vacuum can then be adjusted as needed.
- 3.7 Slowly introduce the ink into the module.

### 4.0 Module Replacement

- 4.1 Stop flow, gradually release vacuum, isolate the UltiFuzor degas module and depressurize through system drain valve.
- 4.2 **WARNING! Before attempting to remove the module from the system, ensure that it is fully isolated and depressurized. Failure to do so could result in a rapid discharge of liquid, which could cause personal injury and damage to equipment.**
- 4.3 Disconnect the module from the system. Note, a small amount of ink may be released from the module when it is disconnected.
- 4.4 Handle and discard the module in accordance with local health and safety procedures associated with the process fluid.
- 4.5 Install new UltiFuzor degas module per section 3.
- 4.6 UltiFuzor degas modules are consumable products and intended for exposure to one ink. The use of multiple inks is not recommended as ink compatibility interactions may diminish performance or damage modules. Flushing or cleaning is not recommended.

## 5.0 General Comments

- 5.1 Removal of dissolved gases is dependent on a number of factors. These factors can be manipulated to achieve the desired degassing level.
- *Flow rate:* The slower the flow rate the better the degas efficiency, since the gas has a longer opportunity to come into contact with the fiber wall.
  - *Temperature:* The higher the temperature, the more volatile the gas and thus easier to remove
  - *Vacuum level:* The deeper the vacuum (that is the lower the absolute pressure on the vacuum side), the more effective it is at removing dissolved gases. However, as noted above, it is critical not to apply an excessive amount of vacuum so as not to evaporate desirable ink components.
- 5.2 The ink should be passed through a Pall filter, having a removal rating of 5 µm or finer, so as not to clog up the inlet to the UltiFuzor fine hollow fiber membranes.
- 5.3 Periodically check for liquid in the vacuum line and trap, and drain as required. If the ambient temperature is significantly lower than the operating temperature, the level of condensate in the vacuum lines may increase, necessitating more frequent draining.

---

## Appendix 1

### EUROPEAN DIRECTIVE 94/9/EC (ATEX): EQUIPMENT INTENDED FOR USE IN POTENTIALLY EXPLOSIVE ATMOSPHERES

Installation and maintenance should be undertaken by a competent person. National and local codes of practice, environmental regulations and health and safety directives must be adhered to and take precedence over any stated or implied practices within this document.

For fluids having low conductivity, there exists the possibility of generating static electricity during use with all-polymeric components. This could potentially lead to a static electricity discharge, resulting in the ignition of a potentially explosive atmosphere, where such an atmosphere is present. These Pall products are not suitable for use with such low conductivity fluids in an environment that includes flammable liquids or a potentially explosive atmosphere.

Where flammable or reactive fluids are being processed through a Pall degas module, the user should ensure that spillages during filling, venting, depressurizing, draining and module change-out operations are minimized, contained or directed to a safe area. In particular, the user should ensure that flammable fluids are not exposed to surfaces at a temperature that may ignite the fluid, and that reactive fluids cannot contact incompatible materials that may lead to reactions generating heat, flame or that are otherwise undesirable.

Pall degas modules do not generate heat, but during the processing of high temperature fluids, and process upset conditions, it will take on the temperature of the fluid being processed. The user should ensure that this temperature is acceptable for the area in which the filter is to be operated, or that suitable protective measures are employed. When processing flammable fluids, the user should ensure that any air is fully purged from within the assembly during filling and subsequent operation to prevent the formation of a potentially flammable or explosive vapor/air mixture inside the equipment. This can be achieved through careful venting of the assembly or system.

To prevent damage or degradation which may result in leakage of fluids from this equipment, it is imperative that the end user check the suitability of all materials of construction (including seals on the connections where appropriate) with the process fluid and conditions. The user should ensure that the module is regularly inspected for damage and leaks, which should be promptly corrected, and that seals (where appropriate) are renewed after every module change. Leakage of flammable or reactive fluids from this module, arising through incorrect installation or damage to the equipment (including any seals), may generate a source of ignition if flammable fluids are exposed to a heated surface, or if reactive fluids contact incompatible materials that may lead to reactions generating heat, flame or that are otherwise undesirable.

The user should ensure that the assembly is regularly inspected for damage and leaks, which should be promptly corrected, and that any seals are renewed after every filter change. The user should ensure that these products are protected from foreseeable mechanical damage that might cause such leakage, including impact and abrasion.

Regular cleaning with an anti-static material is required to avoid the build-up of dust on the degas module.

Please contact your local Pall office or distributor for additional information, if required.



#### Microelectronics

25 Harbor Park Drive  
Port Washington, New York 11050  
+1 516 484 3600 telephone  
+1 800 360 7255 toll free US

#### Visit us on the Web at [microelectronics.pall.com](http://microelectronics.pall.com)

Pall Corporation has offices and plants throughout the world. For Pall representatives in your area, please go to [www.pall.com/contact](http://www.pall.com/contact).

Because of technological developments related to the products, systems, and/or services described herein, the data and procedures are subject to change without notice. Please consult your Pall representative or visit [www.pall.com](http://www.pall.com) to verify that this information remains valid.

© Copyright 2021, Pall Corporation. Pall, , and UltiFuzor are trademarks of Pall Corporation. ® Indicates a Pall trademark registered in the USA. **Filtration. Separation. Solution.sm** is a service mark of Pall Corporation.